




# Programme Chart and Quick Reference Guide

Before starting, it is essential that you carefully read right through the Installation & Operation Instruction booklet before plugging in to the mains socket.

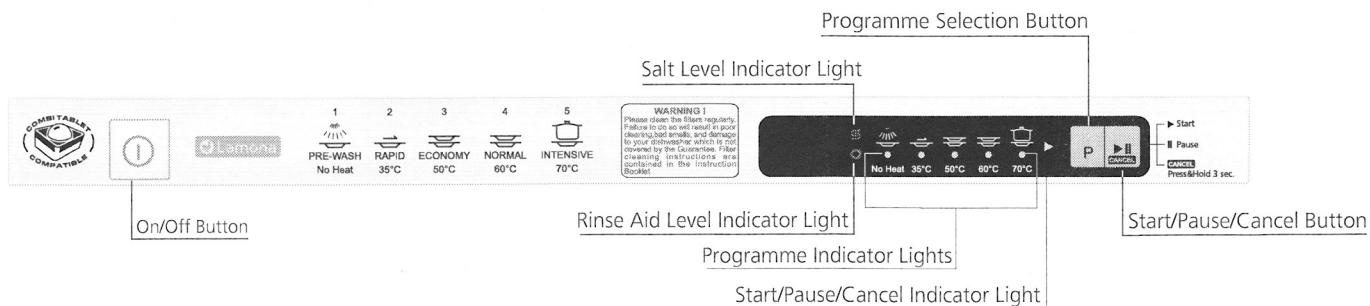

Programme symbols and temperatures	1 PRE-WASH No Heat	2 RAPID 35°C	3 ECONOMY 50°C	4 NORMAL 60°C	5 INTENSIVE 70°C
Programme selection	Pre-wash to rinse and loosen residue - awaiting full load - then select a Programme	Lightly soiled dishes 30 minute programme	Most economic programme for normally soiled dishes	Soiled dishes	Heavily soiled dishes requiring Hot pre-wash
Detergent compartment A=25 cm <sup>3</sup> / 15 cm <sup>3</sup> B=5 cm <sup>3</sup>	-	A	A+B	A+B	A+B
Programme sequence	Prewash ▼ End	Wash ▼ Cold rinse ▼ Hot rinse ▼ End	Prewash ▼ Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Prewash ▼ Wash ▼ Cold rinse ▼ Hot °C rinse ▼ Drying ▼ End
Consumption figures*					
Water (Litres)	3,6	10,2	13	10,6	14,4
Energy (kwh)	-	0,76	1,01	1,17	1,32
Duration (min)	15	30	140	58	115

\* Values declared on the product or in the operating instruction booklet / programme chart and quick reference card supplied with the product are obtained in tests performed under controlled laboratory conditions and these tests are as defined in relevant standards. These figures may vary depending on how soiled the dishes are, the water hardness level and other factors. Temperature changes exceeding 15°C may also effect these figures.

\*\* Reference programme for the Testing Institute and energy labelling. Testing program: Eco 50°C as compliant to EN 50242 international norms.

\*\*\* Due to continual improvement through research & design, specifications and design may change without prior notice.