

Refit the heater to the wall and fasten the bottom fixing bracket to the wall using the screws provided to permanently fix the heater in place.

Unpack the pebbles from the bag and place them along the light unit in the desired position.

Place the front surround over the front of the fire aligning the slots in the brackets at each side of the front panel with the lugs on the sides of the fire-see Fig.4.

**Again two people will be required for this operation.**

## Instructions for Use

The appliance can be operated either by the switches located on the top right hand side of the fire or by the supplied remote control.

## Manual Operation

This is done by operating the switches located at the top right hand side of the fire .The standby rocker switch must first be switched on, the fire will beep to indicate that it is powered up.

Press the O/I button once to turn on the appliance and fire effect. A red indicator light will show to indicate that the fire is ON. Press the O/I button for 3 seconds this will operate the dimmer mode, hold the button down until the desired brightness is obtained.

Press the 900W button once for the low heat setting; press twice to switch off the heat setting.

Press the 1800W button once for the high heat setting; press twice to switch off the heat setting.

## Remote Operation

The standby rocker switch located at the top right hand side of the fire must first be switched on, the fire will beep to indicate that it is powered up..

It takes a little time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for the fire to operate normally.

Press the ON/OFF button once to turn on the appliance and fire effect.

Press the 900W button once for the low heat setting; press twice to switch off the heat setting.

Press the 1800W button once for the high heat setting; press twice to switch off the heat setting.

Press the DIMMER button to operate the dimmer mode, repeat pressing will raise and lower the brightness.

## Safety Cut-Off

This appliance is fitted with a safety cut-off which will operate if the fire overheats (e.g. due to blocked air vents). For safety reasons, the fire will NOT automatically reset.

To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect to the mains supply and switch on the appliance.

## Troubleshooting

Symptom	Solution
No operation/ no fan.	Check fuse by replacement.
	Check for safety cut-off operation.
No fire effect light.	Check the bulb by replacement.

## Replacing the Lamp

**Warning—** Always disconnect from the power supply before replacing the bulbs.

**Warning—** The bulbs will reach a high temperature during operation. Allow the bulbs to cool down after switching off the appliance before replacing.

**NOTE: Two people will be required for this process.**

It is recommended that the fire is carefully removed from the wall and laid on its back in order to replace the lamps.

Gently slide the front panel towards the top of the fire and remove. Store safely out of the way whilst the bulb is replaced so that it does not get damaged.

At the bottom of the fire there is a lamp cover fixed by three Phillip's head screws, remove the screws and lift off the lamp cover-see Fig.5.

For access to the bulbs, carefully slide the flexible rotisserie to one side ensuring that the rubber grommet is not lost-see Fig.6.

Remove the defective bulb by unscrewing it.

Replace with a **40W E14 SES Clear Candle bulb**. Take care not to over-tighten the bulb.

Refit the rotisserie making sure that the rubber grommet is carefully pushed into the slotted hole on the bracket.

Lift the fire back onto the wall and replace the glass front by lifting onto the lugs either side of the fire. Ensure that the lower bracket is screwed to the wall.